



Connect to the Computer

OBSBOT Tiny 2 is compatible with both Windows and Mac computers. To set up your OBSBOT Tiny 2, use the standard data cable to connect it to your laptop or the USB 3.0 port on your desktop. If necessary, use the provided USB-C to USB-A adapter. The webcam will automatically install on your device. Please wait a few seconds for the installation to finish before attempting to access the webcam. After the installation is complete, you can use popular video call platforms such as Zoom, Microsoft Teams, Skype, or Google Meet to start streaming with your Tiny 2. Make sure to use the cable included with the camera.

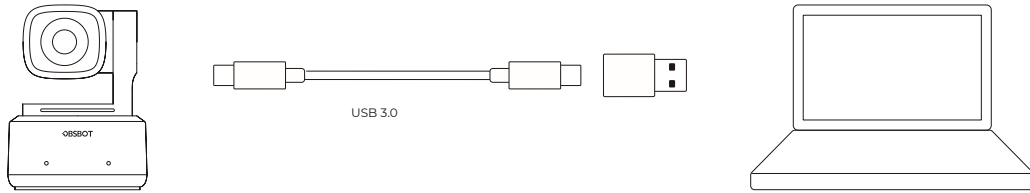


Gesture Control

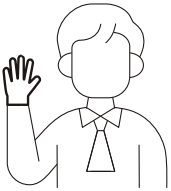


Turn On/Off Human Tracking

To enter human tracking mode, perform the gesture as shown in the figure. The current status light will flash twice in succession and then turn to a steady blue state, indicating that you have successfully entered human tracking mode. To exit human tracking mode, perform the same gesture again. The blue status light will flash twice continuously and then turn to a steady green state, indicating that you have successfully exited human tracking mode.

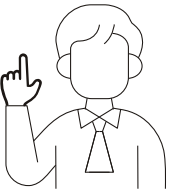

Zoom to 2x (default) / Cancel

Perform the gesture control as shown in the figure. The status light will flash twice continuously to indicate that the zoom in/out operation has been performed.

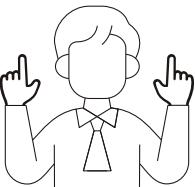

Dynamic Zoom

Perform gesture control as shown in the figure until the status light starts flashing, at which means the dynamic zoom function is activated. Zoom in or out as the distance between your hands changes, until no gesture is detected or the zoom status can no longer be adjusted

Voice Control

OBSBOT Tiny 2 revolutionizes the way you interact with your webcam by introducing voice control, making your video calls smoother.

Voice Commands	Paraphrase
Hi, Tiny	Wake up Tiny 2
Sleep, Tiny	Enter sleep mode
Track Me	Turn on Human Tracking
Unlock Me	Turn off Human Tracking
Zoom in Closer	Zoom to 2x (default)
Zoom out Further	Back to 1x

Light Indicator

Equipment Status	Indicator Statuses
Power-on initialization	Blue lights flash in a cycle, means the product is being initialized
No target is selected	Green light keeps on
Execute gesture/voice control	The indicator for the current state blinks twice in succession and then switches to the state of the identified indicator light
Enable human tracking	Blue light keeps on
Target losing	Yellow light keeps on
Enable hand tracking	Purple light keeps on
Firmware upgrading	Blue/yellow flash alternately
Firmware upgrade failed	Red light flash slowly
Device in fault	Red light keeps on
Sleep mode	Light off

Tutorial Video

User could access and watch tutorial videos through the following links to use the product correctly.

